


ACCESSORY KIT INSTALLATION INSTRUCTIONS

EXTERIOR ROOF JACK EXTENSION

APPLICATION


Exterior Roof Jack Extension is for use with the 4000 Series Roof Jack.

STEP 1 : Remove Upper & Lower Cap.

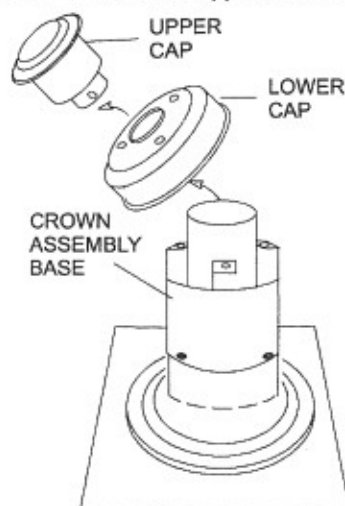

Remove the 2 screws that secure the upper cap to the crown assembly base and remove the upper cap. Next, remove the 3 screws that secure the lower cap to the crown assembly base. Set both caps aside for later use.


STEP 2 : Install Extension.

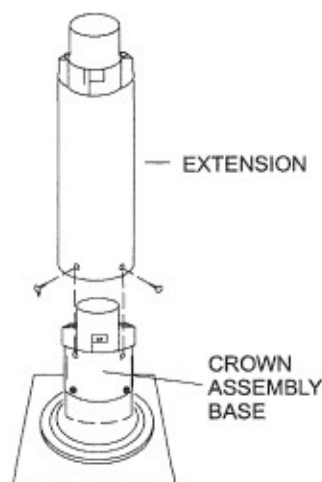

Place the roof jack extension on top of the crown assembly base, pushing down firmly to assure a snug fit. **IMPORTANT:** Make sure that the pipes are connected.

Using the 4 holes at the base of the extension as a guide, drill 4 holes 1/8" diameter into the crown assembly base. Secure the extension to the crown assembly base with the 4 screws provided. Install the lower cap on top of the extension so that the center pipe sticks through the hole in the lower cap.

STEP 3 : Reinstall Upper & Lower Cap to Extension.

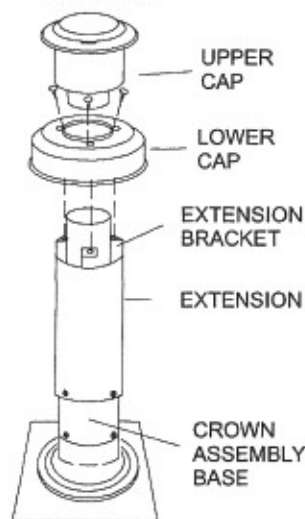

Using the 3 screws removed in step 3, attach the lower cap to the extension bracket. Install the upper cap over the center pipe of the extension. Using the 2 holes located at the base of the upper cap as guides, drill 2 holes 1/8" diameter into the center pipe. Finally, attach the upper cap to the center pipe using the 2 screws removed in step 3 to the center pipe.

STEP 4 : Assembly Complete.



Place these instructions in the Customer Envelope provided with the furnace.